



How to reset your Tenda Router:

Step one:


Press and hold the button on the back of the Tenda router for about 10 seconds, maybe longer, until all the lights on the front of the router flash at once or until your Wi-Fi name has changed to Tenda_#####.



Reset

Step two:

Connect to the Tenda_#####
Wi-Fi.


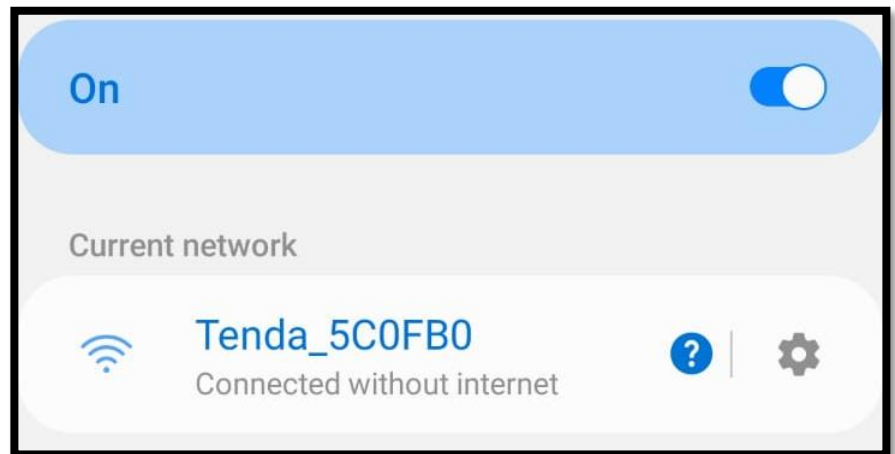


Step three:

Go to a search engine on your phone or
computer. Type in the search bar

192.168.0.1

It must be in the typed into the top
search bar (URL bar) for it to work.

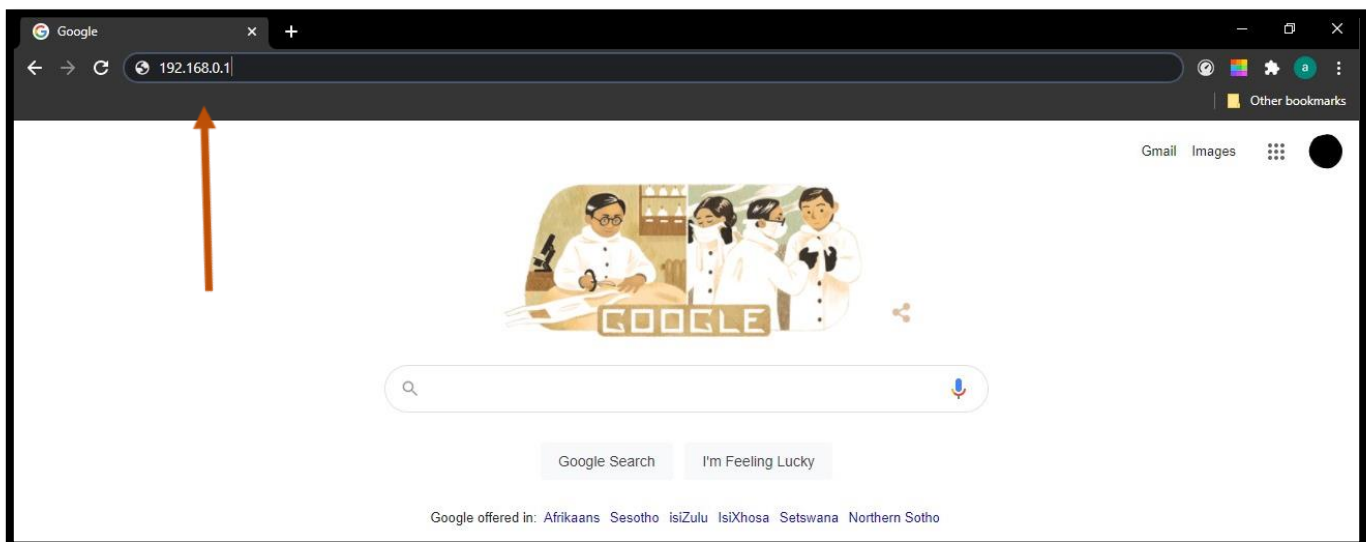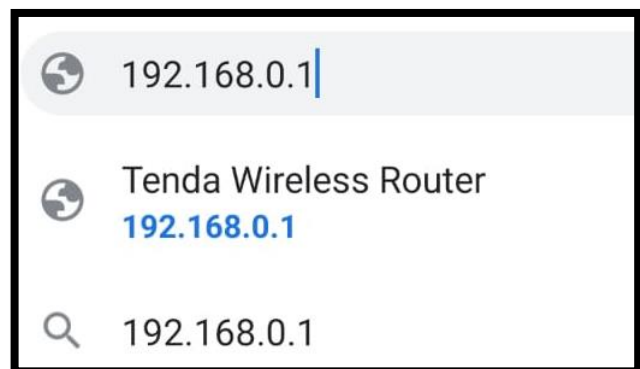


Step four:

Click on DHCP.

Change the “Wi-Fi Name” and “Wi-Fi Password”.

Remember, your Wi-Fi password must be at least 8 characters.

Save your changes by clicking OK.

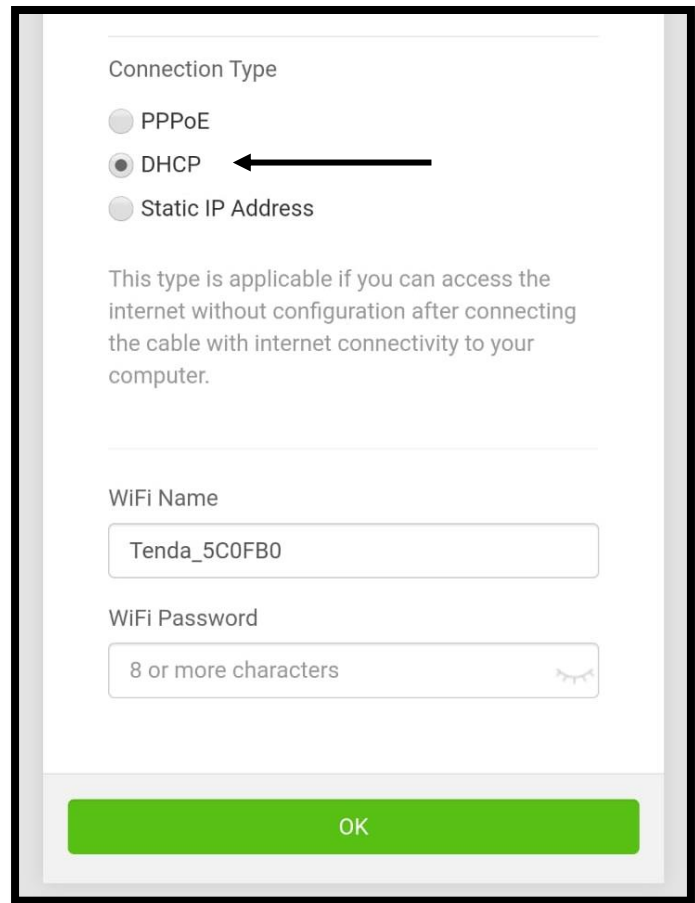

Connection Type

☐ PPPoE

☒ DHCP ←

☐ Static IP Address

This type is applicable if you can access the internet without configuration after connecting the cable with internet connectivity to your computer.

WiFi Name

Tenda_5C0FB0


WiFi Password

8 or more characters

OK

You could skip to step six if you changed you Wi-Fi name to something new.

If you kept the Wi-Fi name the same as before you reset it, your device will try to reconnect, but it will not be able to.

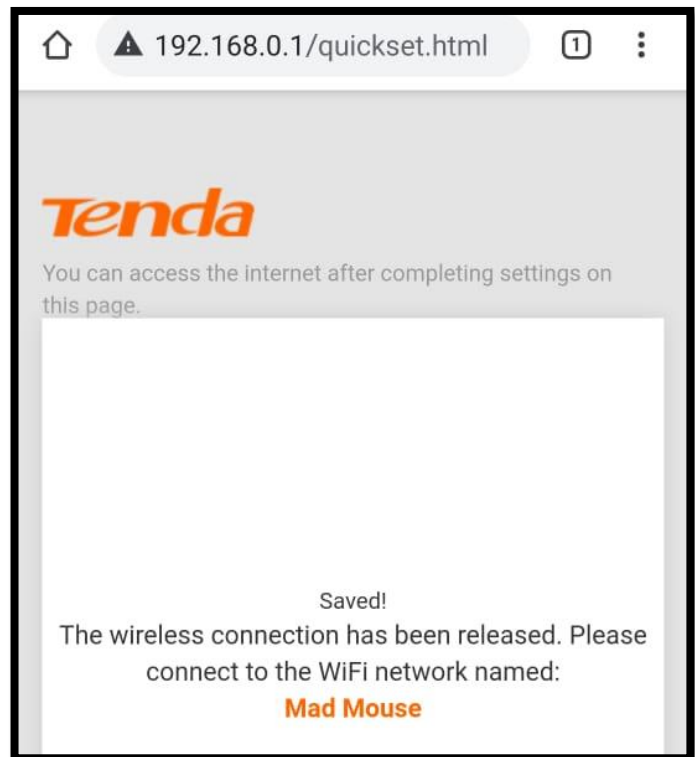

192.168.0.1/quickset.html

Tenda

You can access the Internet after completing settings on this page.

Saved!


The wireless connection has been released. Please connect to the WiFi network named:

Mad Mouse

Step five:

You will have to “Forget Network” and reconnect your devices.

Go to your Wi-Fi settings on your devices. Click and hold on the Wi-Fi tab and click on “Forget Network”.

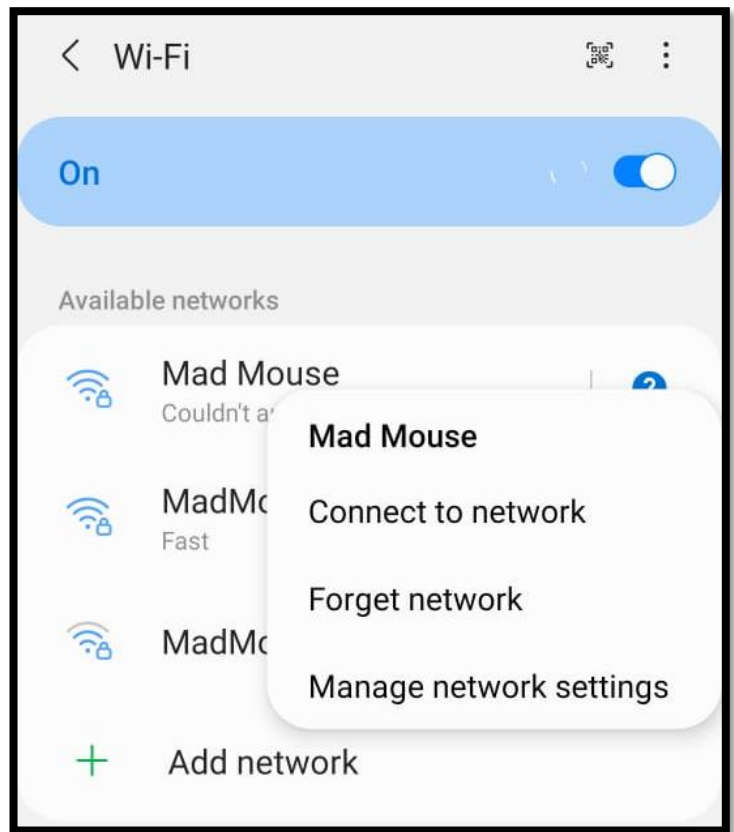**Step six:**

Then reconnect your devices to the Wi-Fi with the new Wi-Fi name and password.